
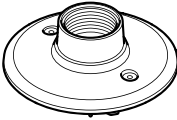 




 
 
 



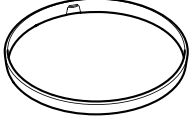 
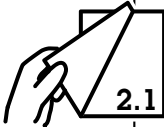 
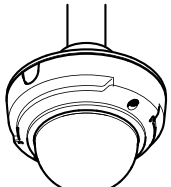 
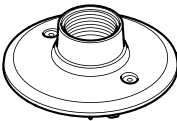 




 
 
 

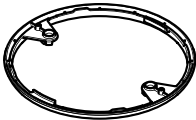 

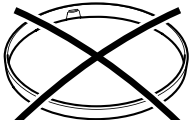 

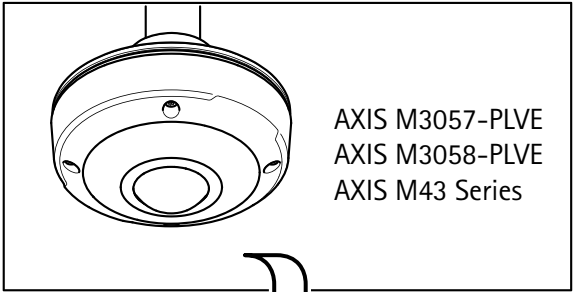 



AXIS T94K01D Pendant Kit

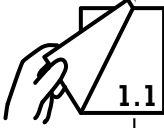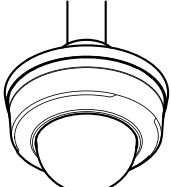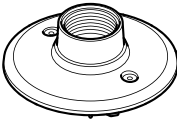Installation guide
Guide d'installation
Installationsanleitung
Guida all'installazione
Guía de instalación
インストールガイド
Guia de instalação
Руководство по установке
설치가이드
安裝指南
Panduan instalasi


 <p>AXIS M3057-PLVE AXIS M3058-PLVE AXIS M43 Series</p>	 <p>1x</p>  <p>2x</p>	 <p>1x</p>  <p>2x</p>	 <p>1x</p>  <p>1.1</p>
 <p>AXIS P32-V/-LV</p>	 <p>1x</p>  <p>2x</p>	 <p>1x</p>  <p>2x</p>	 <p>1x</p>  <p>2.1</p>
 <p>AXIS P33-V/-LV</p>	 <p>1x</p>  <p>2x</p>	 <p>1x</p>  <p>2x</p>	 <p>1x</p>  <p>3.1</p>
 <p>AXIS Q35-V/-LV</p>	 <p>1x</p>  <p>2x</p>	 <p>1x</p>  <p>2x</p>	 <p>1x</p>  <p>4.1</p>

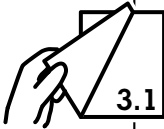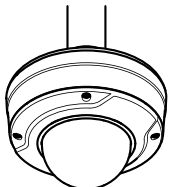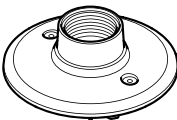

 
1.1

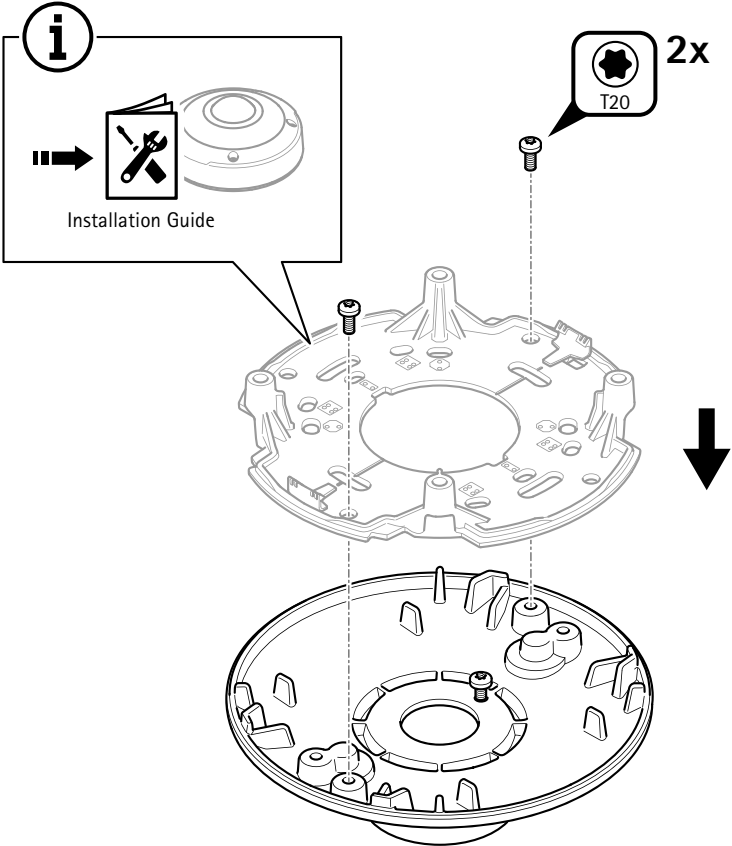

 
1.2

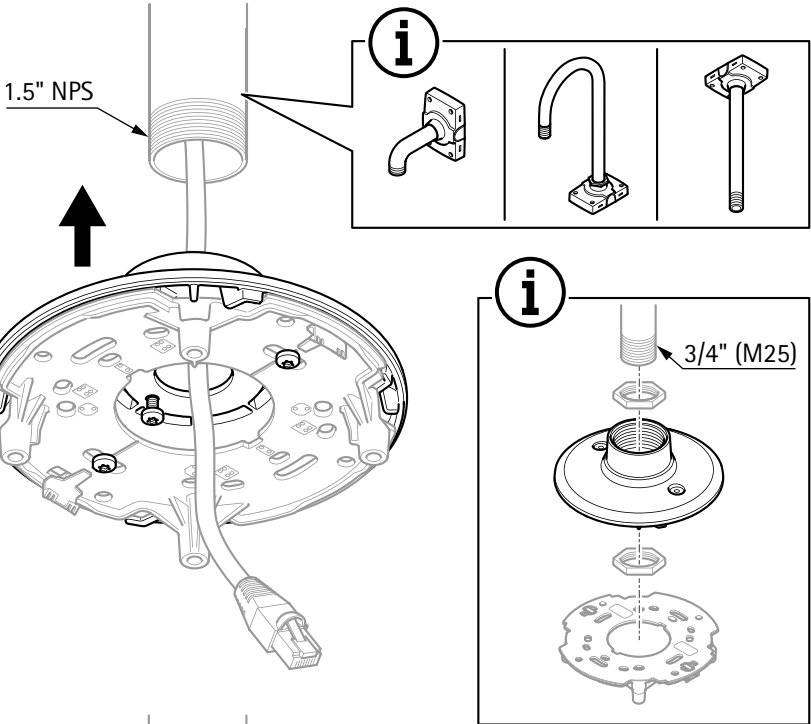

 1.3

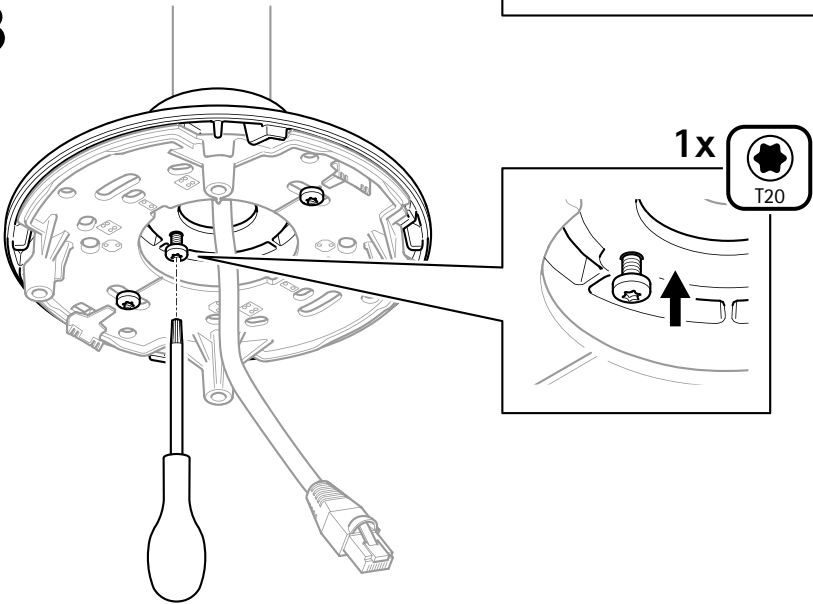


 
1.4

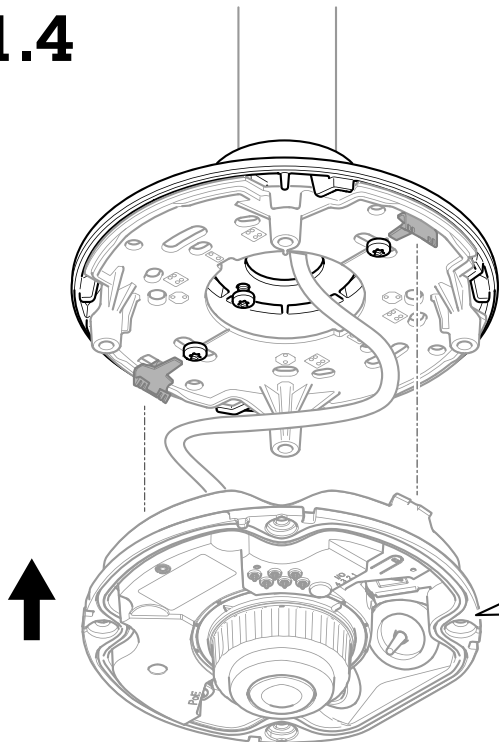



i

  Installation Guide




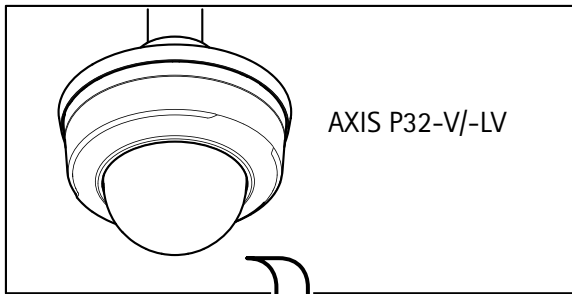

  
2.1

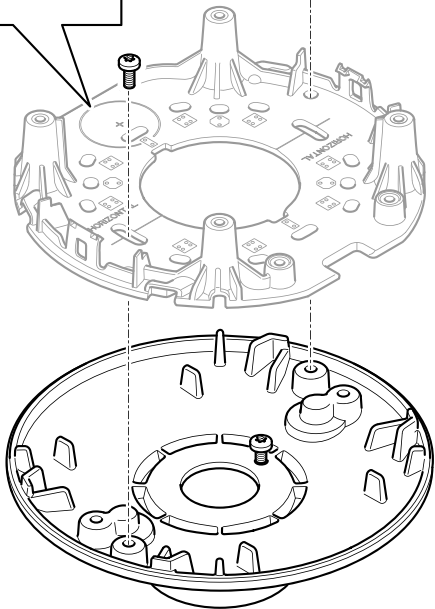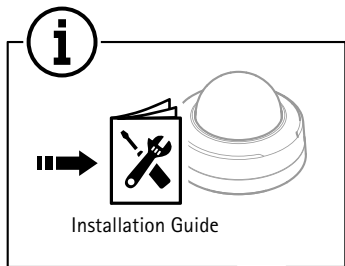

 
2.2

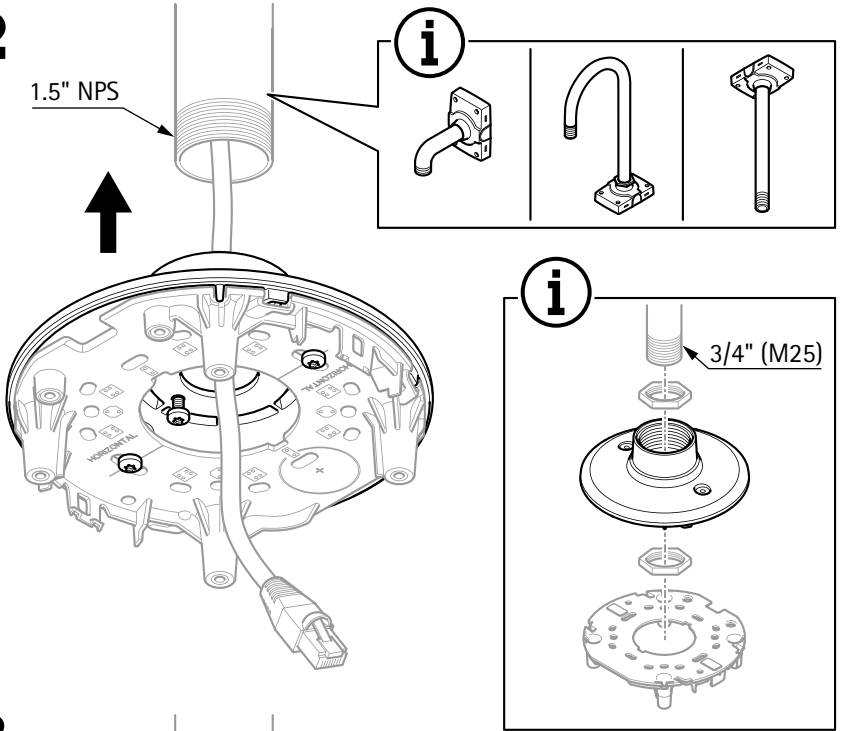

 
2.3

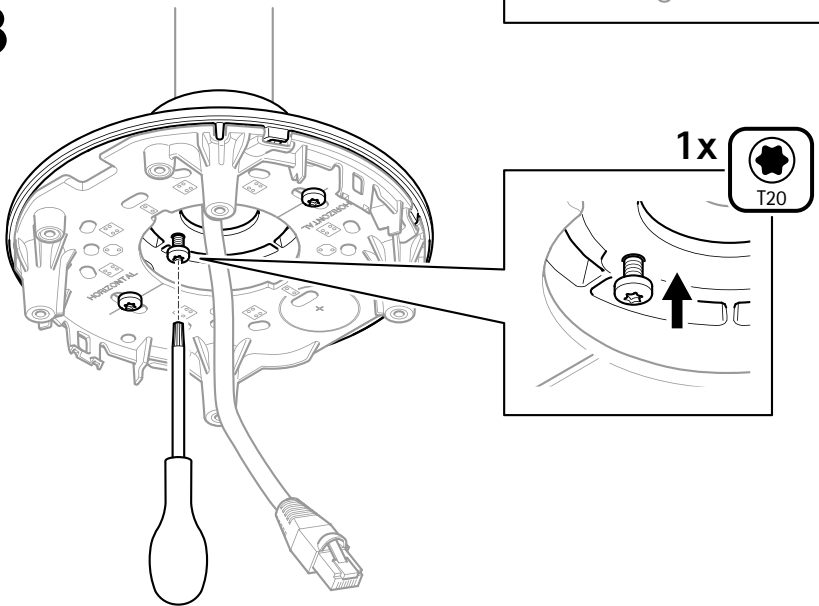

 
2.4


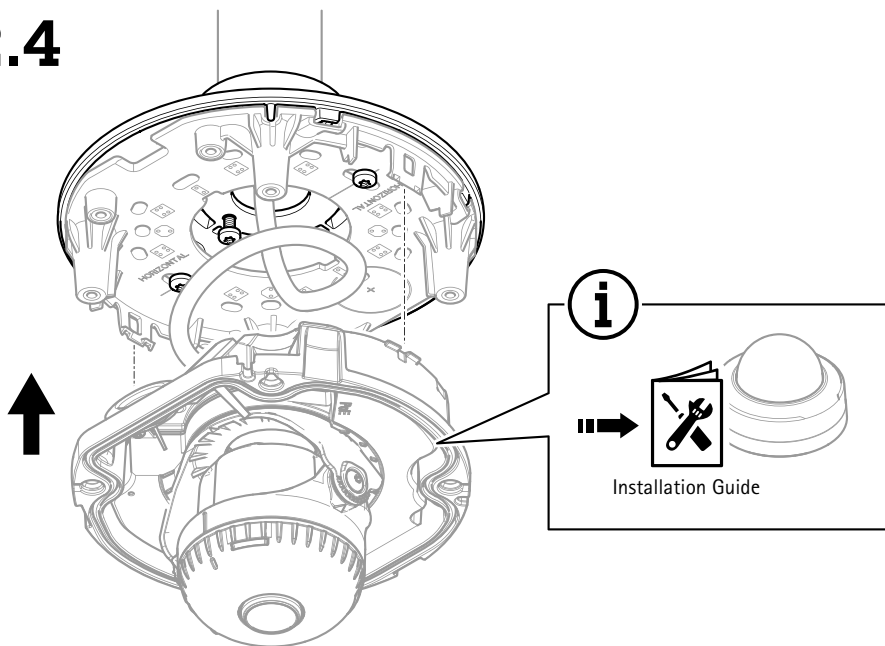


 2.5

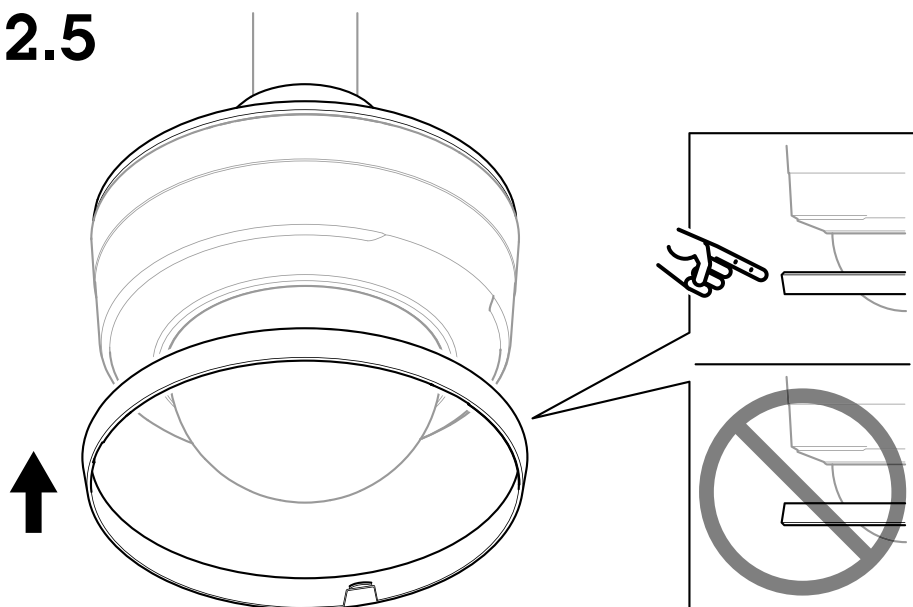


   2.6

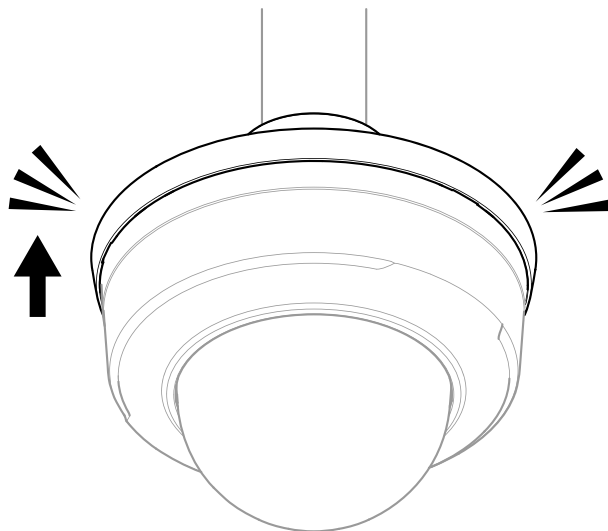


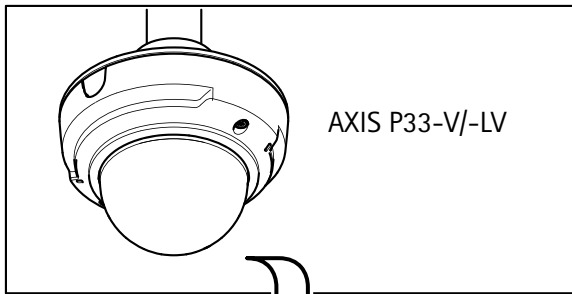

 
3.1


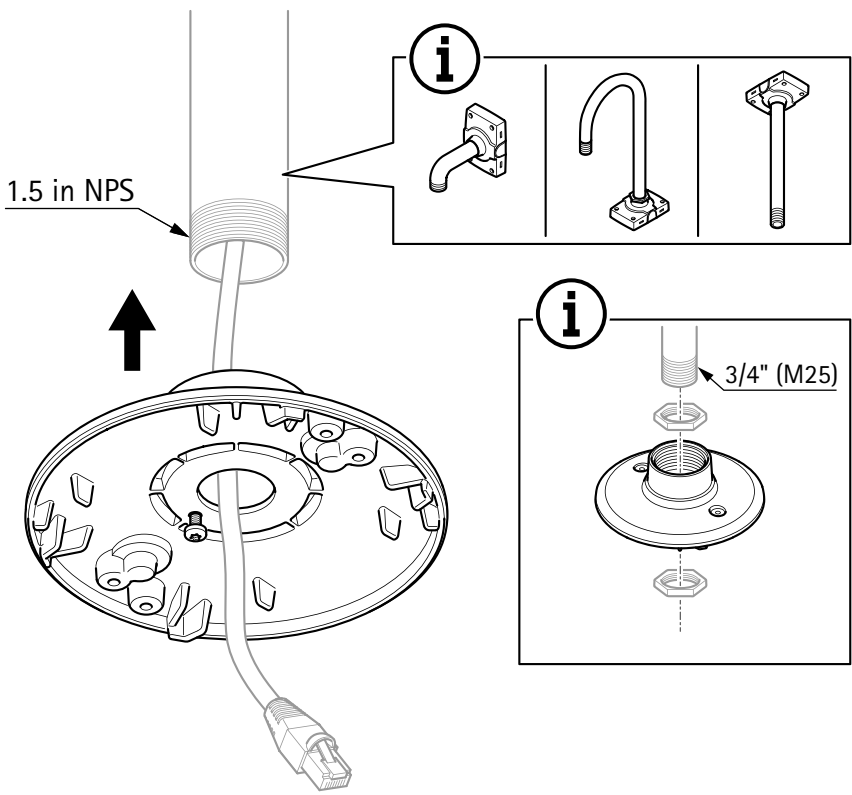


 3.2

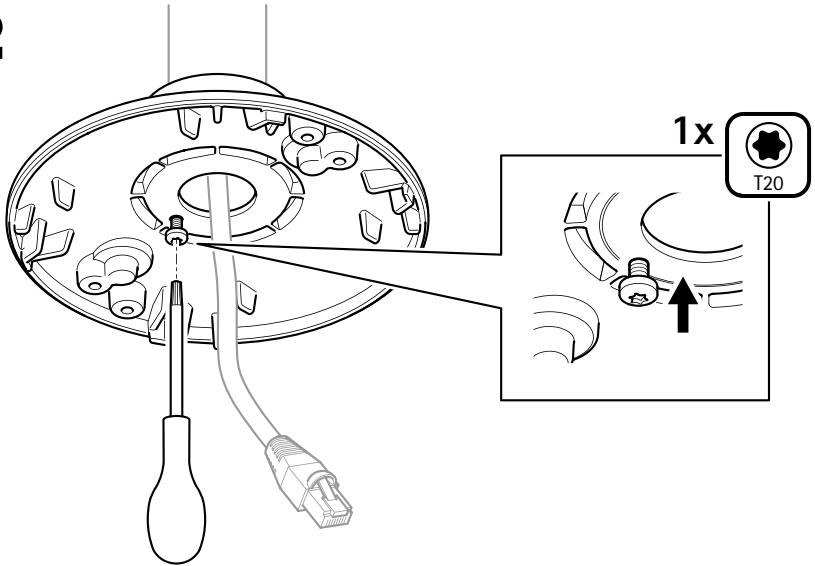


   3.3


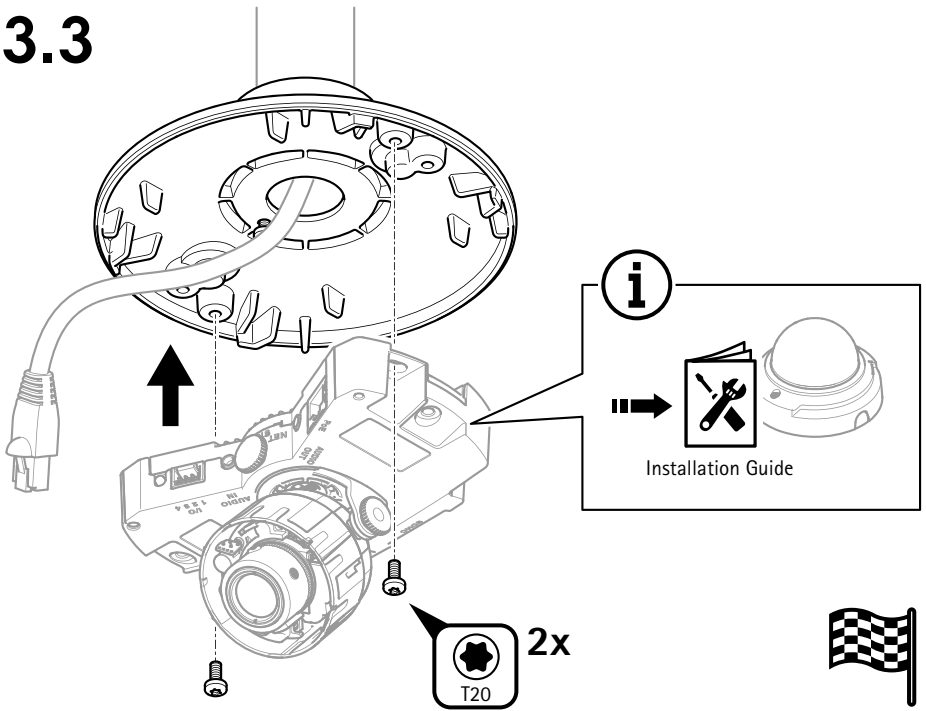


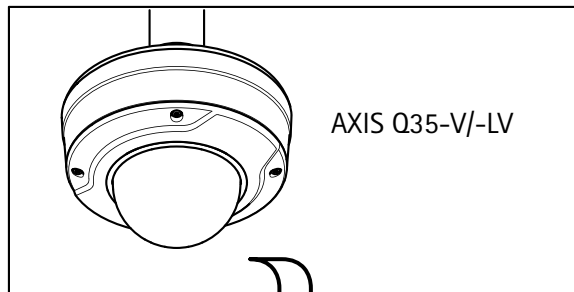

 
4.1

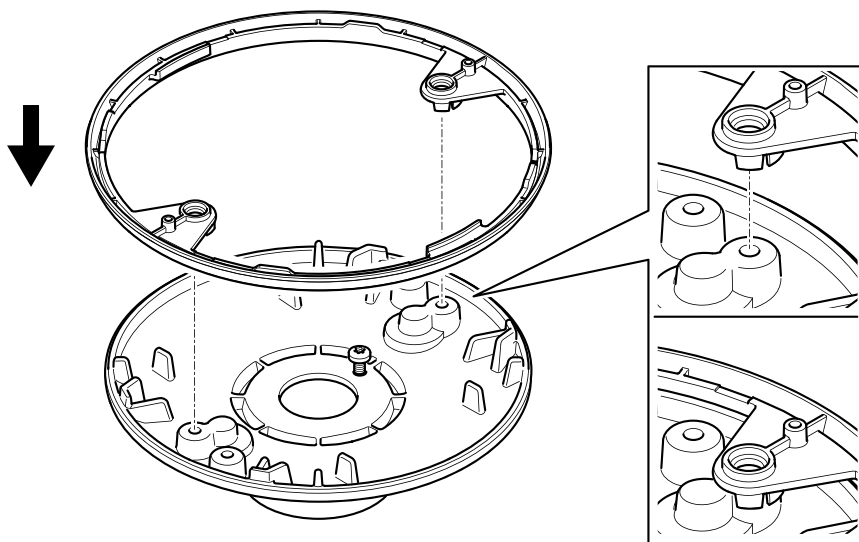

  
4.2

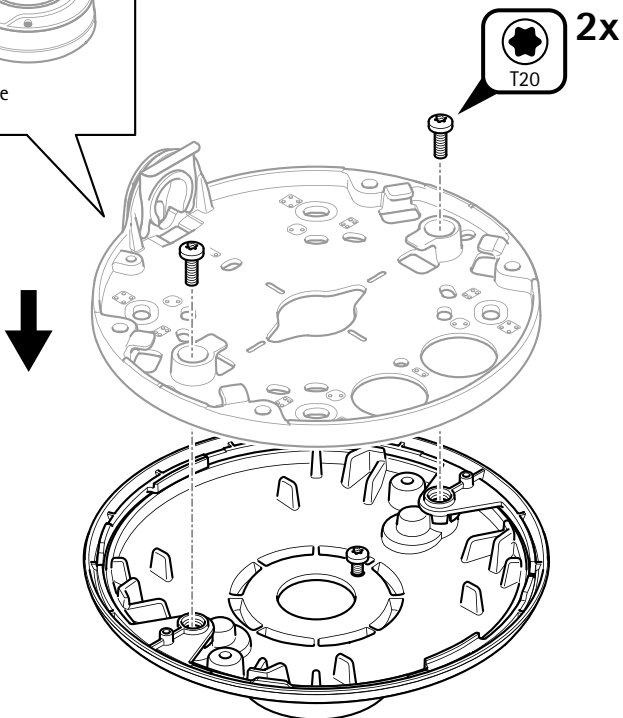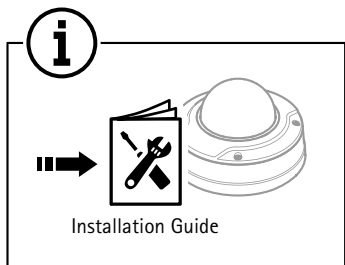

 
4.3

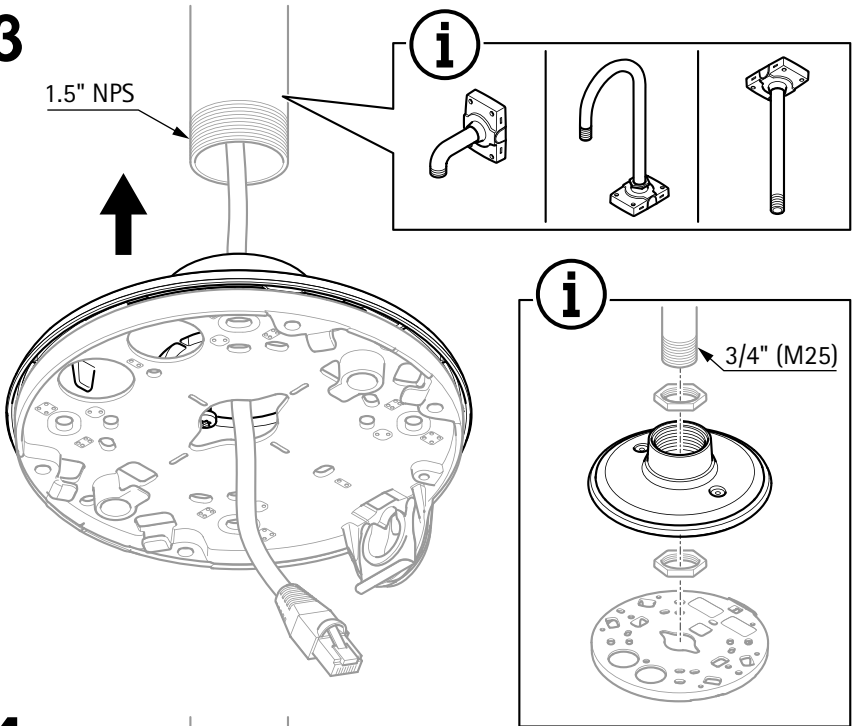

 4.4

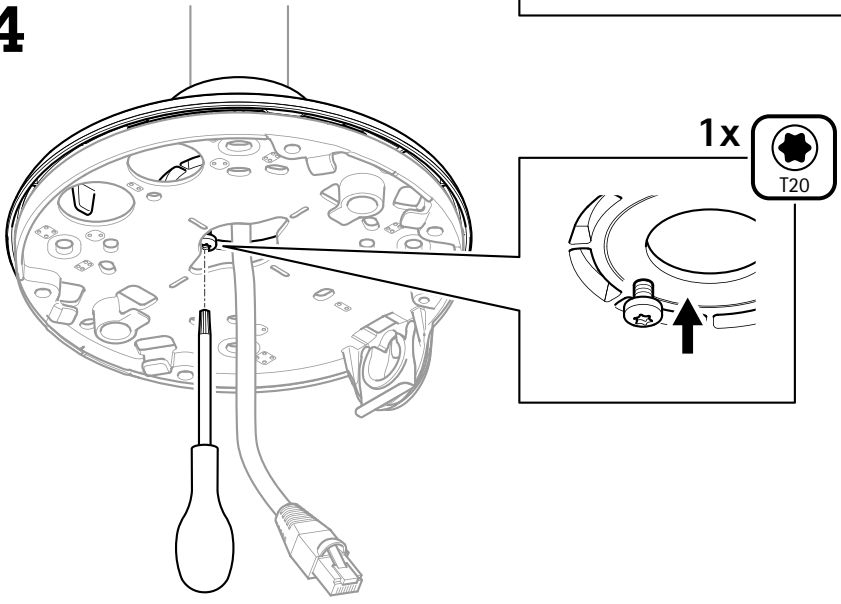

 4.5

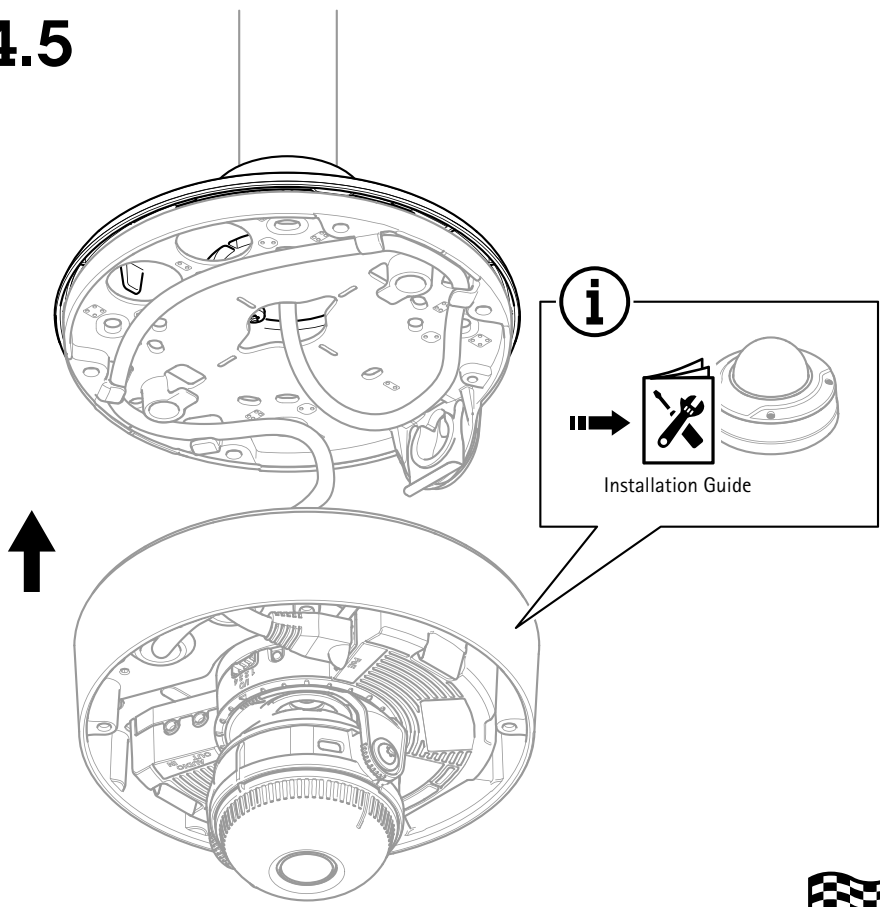



1825623

2025-01 (M6.2)

© 2021 – 2025 Axis Communications AB